


# KBLD183201 RPLidar

- 
- 
- 
- 
- 
- (framegrabber)


[Enthernet Accessory.rar](#)

---


a.vb

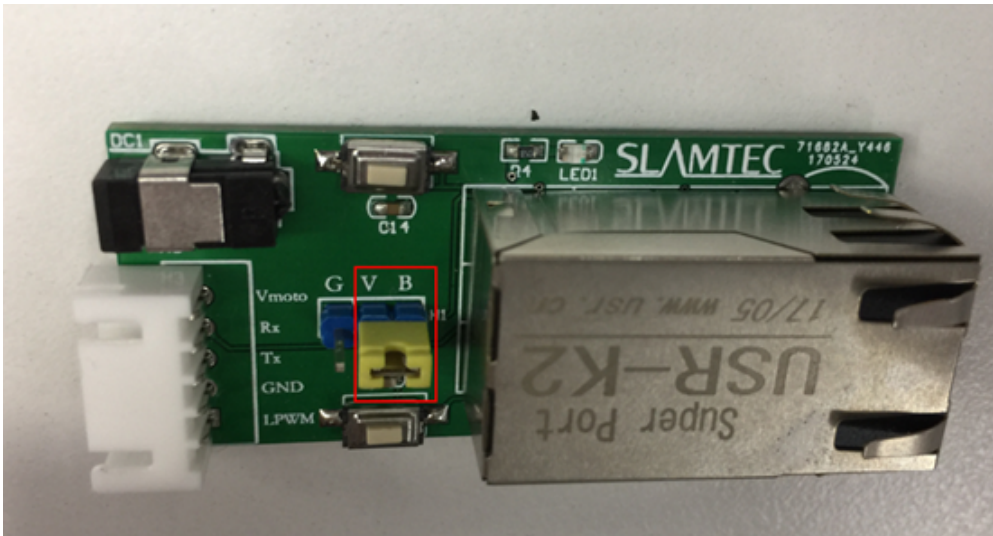


b.usbub

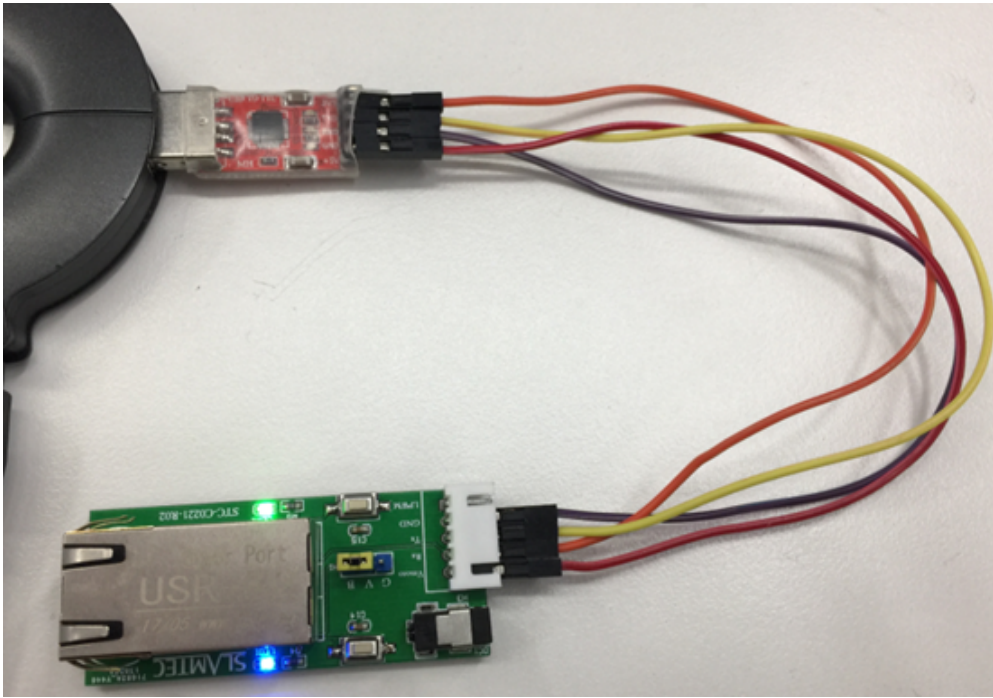


```
c.eisp.exeusb(.hex)
```

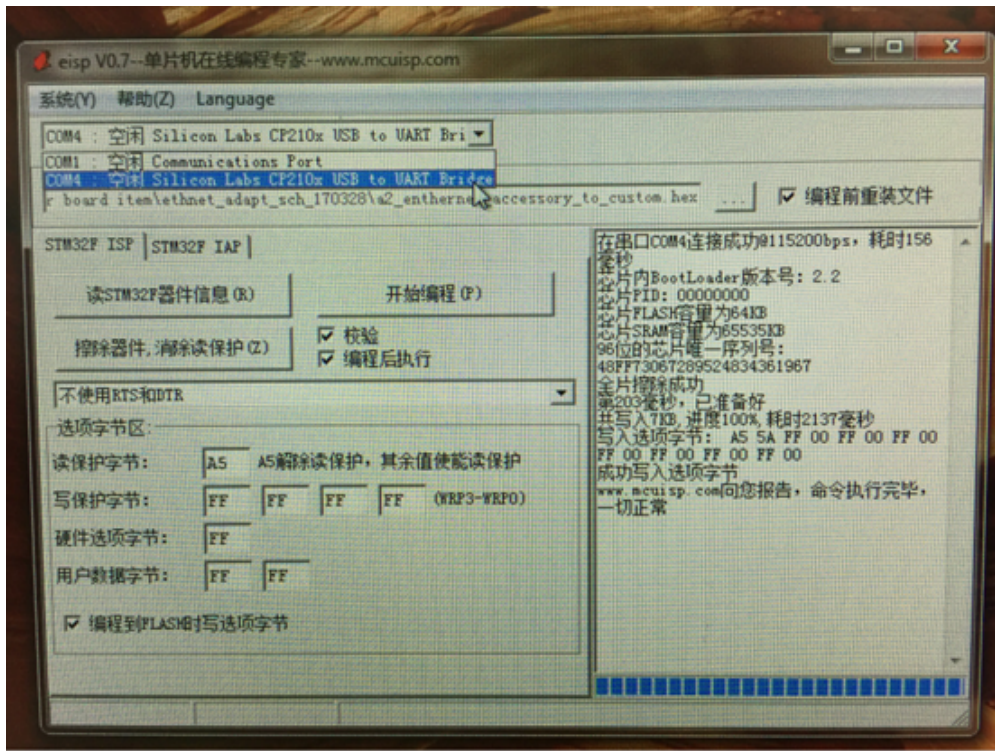

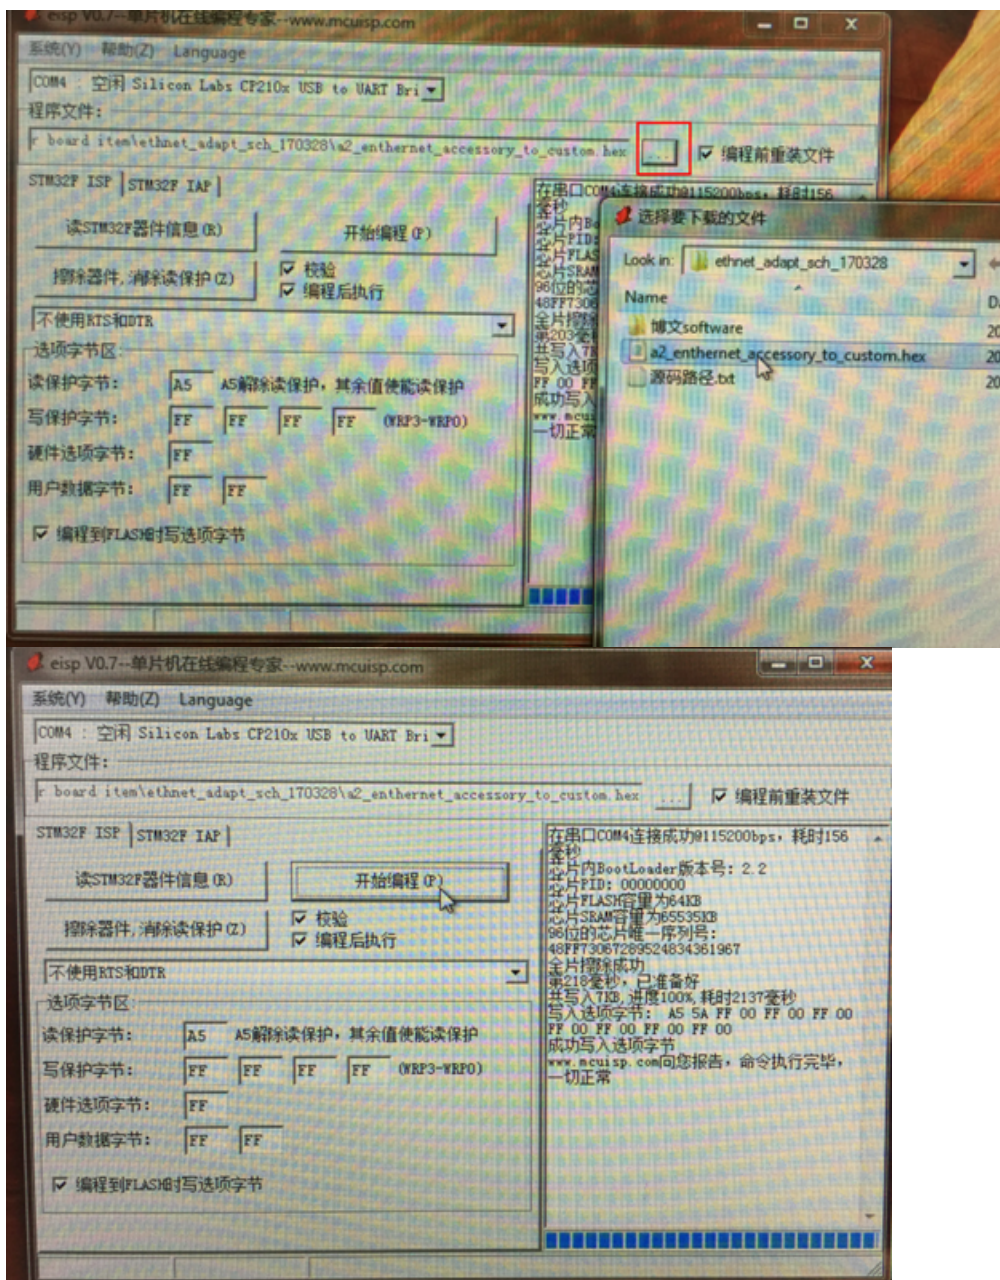


d.usbvb

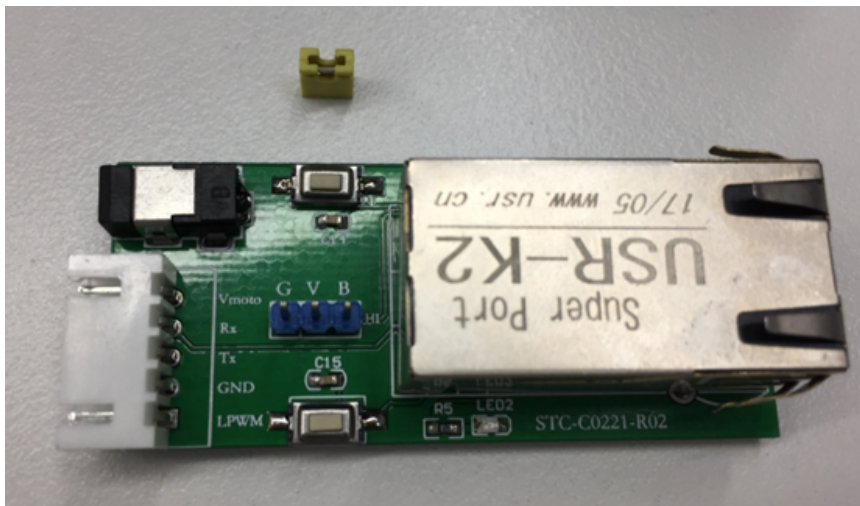


1. USR-M0-V2.1.2.118.exe



2.

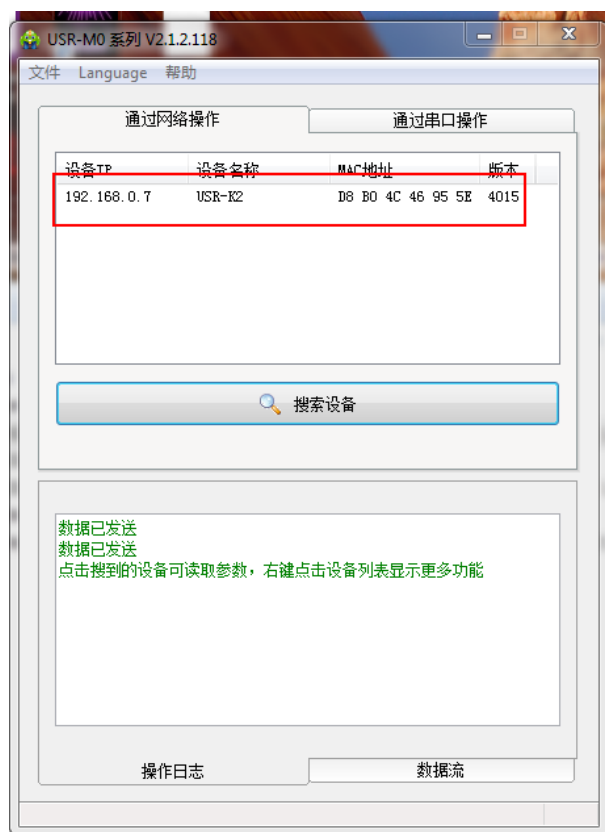


3.

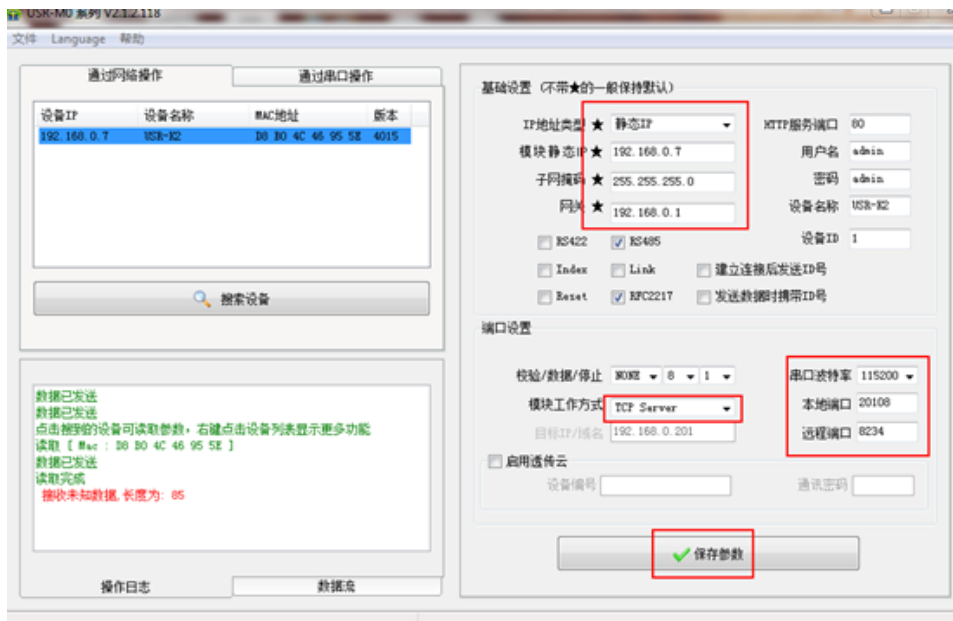

A3256000A3

(framegrabber)

USR-TCP232-Test-V1.3.exe

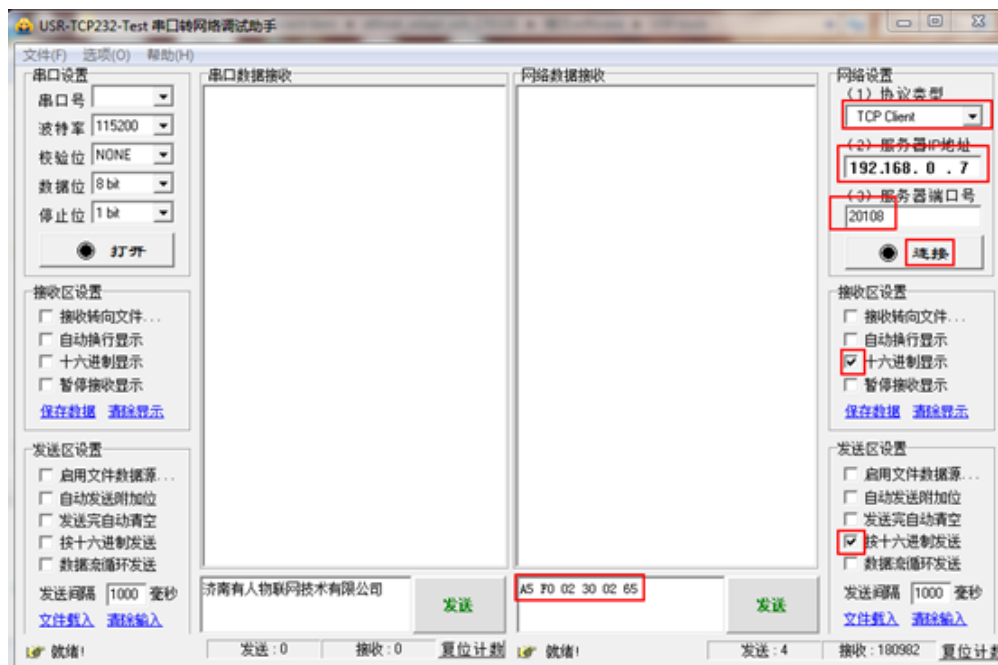

a5 20



网络数据接收

A5 5A 05 00 00 40 813E 89 B3 9F 03 3E  
39 57 A1 07 3E 19 58 BA 07 3E 09 59 0D  
08 02 A9 5C 00 00 02 91 5D 00 00 3E 8D  
5E 00 00 3E C5 5B 13 30 2A BF 5C 03 30  
02 7B 61 00 00 3E B5 5E 6E 30 02 71 63  
00 00 02 6B 64 00 00 32 89 61 0C 53 3E  
E1 62 4F 16 3E ED 63 98 14 3E E9 64 86  
13 3E FB 65 BD 12 3E FB 66 38 12 02 5B  
6B 00 00 3E DD 68 4E 15 3E D9 69 DD 14  
3E D7 6A D7 14 3E D9 6B 1D 15 3E D1 6C  
C8 15 02 43 71 00 00 02 3F 72 00 00 02  
3B 73 00 00 02 37 74 00 00 02 25 75 00  
00 02 21 76 00 00 3E F3 73 D3 0C 2A 8F  
75 0E 08 02 11 79 00 00 02 0B 7A 00 00  
02 07 7B 00 00 02 01 7C 00 00 02 FB 7C  
00 00 02 F7 7D 00 00 22 0D 7C D4 09 02  
EB 7F 00 00 02 E5 80 00 00 02 E1 81 00  
00 32 25 81 0E 05 02 D7 83 00 00 02 D3  
84 00 00 02 CD 85 00 00 26 E9 84 3B 05  
02 C3 87 00 00 02 BF 88 00 00 02 B9 89  
00 00 3E 69 88 78 06 02 AF 8B 00 00 02  
A9 8C 00 00 02 B3 8D 00 00 02 AF 8E 00  
00 3E F7 8C 30 09 02 A7 90 00 00 32 03  
8F 90 08 3E 6F 90 93 06 02 9B 93 00 00

本地主机: 192.168. 0 . 10 端口: 61162

a5 25

发送

就绪!

发送: 14

接收: 1122784 复位计数

网络设置

(1) 协议类型  
TCP Client

(2) 服务器IP地址  
192.168. 0 . 7

(3) 服务器端口号  
20108

断开

接收区设置

☐ 接收转向文件...

☐ 自动换行显示

☒ 十六进制显示

☐ 暂停接收显示

保存数据 清除显示

发送区设置

☐ 启用文件数据源...

☐ 自动发送附加位

☐ 发送完自动清空

☒ 按十六进制发送

☐ 数据流循环发送

发送间隔 1000 毫秒

文件载入 清除输入